


VSZT-1+ szerelési vázlat.

Külső menetes csaptelephez, szerelési útmutatás

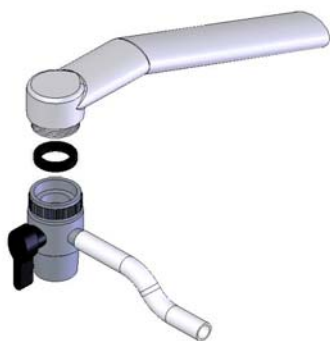

Belső menetes csaptelephez, szerelési útmutatás.



COMMISSIONING GUIDELINES FOR THE VSZT 1+ HOME SINGLE-FILTER WATER TREATMENT EQUIPMENT

Please take a look at the equipment and read the commissioning guidelines carefully.

- Please remove the equipment from its box together with the accessories.
- Unscrew the filter house and remove the filter cartridge.
- Wash the filter house with antiseptic detergent, unwrap the filter cartridge and put it into the filter house. Please pay attention to the adequate insertion of the filter cartridge.
- Pour the content of the attached Sanosil D10 antiseptic package into the lower part of the filter house.
- Screw the filter house back, not too tightly.
- Check the bib of the tap and remove the filter and all scale.
- Wash the end of the bib with antiseptic detergent and rinse it.
- Check the switch tap of the organ equipment, how can you connect it to the end of the bib. You can see from the screw of the bib if you need the connecting adapter.
- Wash the switch tap as well with the antiseptic detergent and check if the rubber ring is in its place.
- Screw the switch tap to the bib of the tap and find comfortable position to handle the equipment.
- The switch tap has two positions. In one position you can use it for doing the washing-up, in the other position the water flows through the organ equipment.
- Turn the switch to the position where the water flows through the organ equipment.
- Turn the cold water tap slowly see how the water flows through the organ equipment.
- Close the tap and let the water in the equipment for at least 2 hours. After this, let the water flow through the equipment for at least 5 minutes. In the meanwhile check whether the sealing of the system is adequate.
- The organ equipment has been commissioned.

It is important to observe the rules of hygiene during the above steps! Please touch the internal parts of the organ equipment with clean, sterile hands, and use antiseptic detergent during the replacement of the filter cartridges.

Attention: if the equipment is not used for some days, please rinse it for a few minutes by letting the water flow through the equipment continuously.

The filter cartridge shall be replaced after the water quantity specified by the producer has flown through the equipment or after the defined period of time. The filter cartridge shall be replaced every half year or after 3000 litres of water have flown through the equipment. If you do not use the filter cartridge recommended by the producer, please proceed in accordance with the instructions of the producer of the filter cartridge.

The producer of the equipment, ORGON-TECH Bt. recommends the use of the filter cartridges used and licensed by the company.

Replacement of the filter cartridge:

- First, close the cold water tap to stop the water flowing into the equipment.
- Unscrew the filter house, then turn the equipment to have its sole in the upright position. In this position remove the filter house. This position is important to keep the water in the filter house.
- If the operation was successful, put the orgon cylinder and the bottom of the filter house away, remove the filter cartridge from the filter house and pour out the water.
- Wash the parts of the filter house with antiseptic detergent.
- Insert the filter cartridge into the lower part of the filter house, and pour the Sanosil D10 antiseptic liquid into the lower part of the filter house.
- Check the position and potential damage of the rubber ring of the filter house.
- Please do not assemble the orgon equipment with damaged rubber rings, in this case contact the service station at the address or phone number provided below and replace the damaged part.
- Turn the cold water tap and fill in the orgon equipment with water, then let it stay in the equipment.
- After 2 hours turn the cold water tap and let is flow for at least 5 minutes.
- If the equipment is adequately sealed, it is ready for use.

Use of the orgon water

Use the orgon water for: drinking, cooking, watering plants, or for your pets. Ideal for soda water as well.

I hope you will be satisfied with the quality and positive effects of the water prepared by the orgon equipment. It can be consumed by everyone, without quantity limitations but introduce it gradually in the first three days.

We recommend the continuous use of the filter. If the filter is out of use for a longer period of time, it should be replaced.

Conditions of the warranty:

We offer one year full warranty for the equipment, which does not cover the mechanic damages, breaking, impairment, the stripping of the orgon cylinder of the equipment. The orgon cylinder is the heart of the equipment, its disassembly results in the mistuning of the crystals, thus the equipment is not able to fulfil its role, and it will only be an average water filter.

- The warranty does not cover the filter cartridge, as its deterioration is a natural phenomenon when used.
- Should you have any questions regarding the operation of the equipment, please ask the expert of the service station at the following address:

Start of the warranty: year month day.

Address of the service station: 7025. Bölcske. Gátórház u. 6.

Phone: +36-75/535-126 Mobile: +36-20/9391-273

Web: www.kavalko.hu www.orgon.hu mail: kavalko@t-online.hu orgon@t-online.hu